

Digital Sound Level Meter

Model 407750




Introduction

Congratulations on your purchase of the Extech 407750. This device measures sound level in dB and the measurement range can be set automatically or manually. The 407750 offers selectable frequency weighting ('A' and 'C') and Time Response (Fast and Slow). The built-in RS-232 PC interface allows the user to record readings onto a PC in real-time. Careful use of this meter will provide years of reliable service.

Meter Description

1. LCD Display
2. Microphone
3. ON/OFF key
4. REC (Record) key
5. MAXHLD (Max Hold) key
6. C/A Weighting Select key
7. BA (Background Absorber) key
8. F/S Fast / Slow Response select key
9. DOWN
10. Backlit (LCD backlighting) key
11. UPPER
12. AC adaptor jack
13. Calibration screw adjust
14. AC analog output jack
15. DC analog output jack
16. RS-232 output jack

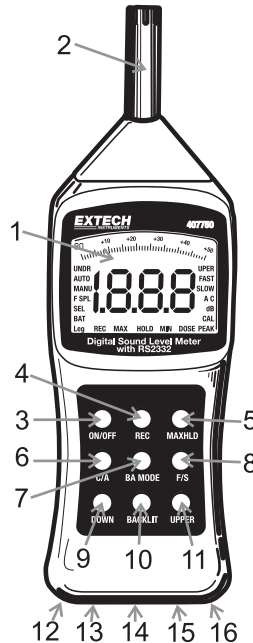

Note: The Battery Compartment and the Threaded Tripod mount access are located on the back of the instrument (not pictured)

Operation

Quick Start

1. Power the meter by pressing the ON/OFF key.
2. The meter's LCD will count down to zero (99.9, 88.8, 77.7, etc.) and then begin measuring sound levels. If the LCD does not switch on after pressing the ON/KEY check the 9V battery.
3. Point the microphone toward the source of the sound level to be measured and view the reading on the meter's LCD.

'A' and 'C' Frequency Weighting

Select 'A' or 'C' weighting via the C/A key. The LCD will reflect the currently selected frequency weighting. Use 'A' weighting to have the meter respond as the human ear would with regard to frequency response (the human ear boosts and cuts amplitude over the frequency spectrum). 'A' weighting is used for environmental measurements, OSHA regulatory testing, law enforcement, and workplace design. Select 'C' weighting for flat responding measurements (less amplitude boost or cut across the frequency spectrum). 'C' weighting is used in applications where hearing conservation is not an issue; for example, in the diagnosis of malfunctions in electrical, electronic and mechanical devices.

FAST/SLOW Response Time

Select either FAST (125ms response) or SLOW (1 second response) measurements by pressing the F/S key. The LCD will reflect the currently selected mode. Selection of 'Fast' or 'Slow' is determined by the application and any directives or standards related to that application. For example, most hearing conservation or OSHA related testing is done using SLOW and A weighting.

MAX HOLD

The meter is capable of taking continuous measurements and only updating the LCD when a higher reading (than the one presently on the display) is detected. The bargraph display continues to change while the main LCD waits for a higher reading. Press the MAXHLD key to activate the MAX HOLD mode. The LCD will reflect the MAX HOLD function. Press the MAXHLD key again to return to normal operation.

Record (REC) Function

To Record the Maximum and Minimum sound level measurements over a programmable period of time, press the REC key. The REC indicator will appear on the LCD. Once the REC key is pressed, the meter begins tracking the highest (MAX) and lowest (MIN) readings. Press the REC again and the MIN indicator will appear on the LCD along with the lowest sound level reading since the REC key was pressed. Press the REC again and the MAX indicator will appear along with the highest reading the meter has encountered since the REC key was first pressed. Press and hold the REC until the REC indicator extinguishes to exit the RECORD mode.

BA (Background Noise Absorber) Mode

The Background Noise Absorber allows the user to accurately measure equipment noise by “eliminating” background noise. The Sound Level Meter first stores the background noise as a reference level. From there, when a sound is measured, the display will show the sound level measurement minus the background noise. To operate the meter in BA mode, follow these steps:

1. Power the meter.
2. Press the MAXHLD key (the MAX HOLD icon will appear on the LCD).
3. Press the BA key ('F' will appear to the left of the SPL display icon).
4. Press the MAX HOLD key again (the MAX HOLD icon will reappear on the LCD).
5. The meter is now displaying the background, reference noise.
6. Power the device under test and note the new sound level meter reading.
7. If the reading changes, the new reading is the sound level of the device. If the reading does not change, the noise produced from the device is either equal to or less than the background noise.
8. Press the BA key again to return to the normal mode of operation.

Auto and Manual Ranging

The meter powers up in the Automatic Range mode. In automatic mode the meter automatically finds the correct range in order to produce the best accuracy. However, if it is desired to set the range manually, follow these steps:

1. Power the meter
2. Notice the two (2) digit number to the immediate left of the analog bargraph. This number is the *low end* of the presently selected range (see the specifications for the ranges).
3. To change the range, press the UP key to raise the range or press the DOWN key to lower the range. The two digit number on the left of the bargraph will change with each key-press.
4. An advantage of Manual mode is that it takes less time for the meter to take a reading. In Auto Range mode the meter must first locate the correct range before displaying a measurement.

LCD Backlighting

Press the BACKLIT key to illuminate the LCD. The backlight will remain on for 5 seconds and then automatically switch off to preserve battery life.

Auto Power Off

To preserve battery life, this meter has an automatic power off feature. If the unit is not used for approximately 20 minutes, the meter shuts off. To override this function, follow these steps:

1. From a power OFF condition, press and hold the ON/OFF and MAX HOLD keys simultaneously.
2. When 'n' appears on the display, release the MAX HOLD and then the ON/OFF key.
3. The Auto Power Off feature is now disabled. Note that the Auto Power Off feature is re-activated the next time the meter is powered down.

Analog Outputs

The meter includes an AC and a DC analog output. These outputs are proportional to the displayed sound level and are ideal for use with chart recorders and dataloggers. The AC output is 0.707V rms full scale and the DC output is 10mV per dB. The labeled 3.5mm output mini-plugs are located on the bottom of the instrument.

RS-232 Output

The meter includes an RS-232 PC interface jack. This PC interface allows the meter to store and display readings on a PC as they are recorded. The interface cable and 407752 software for data acquisition are sold separately. Detailed instructions are provided with the software.

Calibration

To calibrate the meter, an external calibrator such as the Extech Instruments 407744 or 407766 is required in addition to a small screwdriver.

Turn the meter on and set the parameters of the 407750 to the following before proceeding:

Response: Fast

Function: A weighting

Range: 50 to +100 dB

Place the calibrator gently over the microphone of the meter. Set the calibrator to output 1kHz sine wave at 94.0dB. Adjust the calibration potentiometer, located at the bottom of the meter, until the display shows a reading of 94.0 dB.

Battery Replacement

When the low battery message appears on the LCD, the 9V battery has fallen to a critically low voltage level and should be replaced as soon as possible. The battery compartment cover resides at the rear of the meter. Remove the rear battery compartment screw and remove the battery compartment cover, change the battery, and replace the compartment cover.

Safety: Please dispose of batteries responsibly; never dispose of batteries in a fire, batteries may explode or leak. If the meter is not to be used for 60 days or more, remove the battery and store separately.

Specifications


Display	Backlit 2000 count LCD with analog bargraph
Display update rate	Main LCD digits: 0.5 seconds; Bargraph: 50mS
Analog Bargraph	1dB steps with 50dB display range
Microphone	Electret condenser (0.5" diameter)
Measurement Bandwidth	31.5Hz to 8KHz
Measurement Range	A weighting: 30 to 130dB; C weighting: 35 to 130dB 6 ranges in 10 dB steps: 30 to 80dB, 40 to 90dB, 50 to 100dB, 60 to 110dB, 70 to 120dB, 80 to 130dB
Accuracy / Resolution	± 1.5dB / 0.1dB
Time response selections	Fast (125ms) and Slow (1 second)
AC and DC Analog outputs	0.707VAC rms at full scale; 10mVDC / dB; 3.5mm output jacks
Standards	Meets ANSI and IEC Type 2
External Calibrator	Extech models 407766 or 407744
Power	9V Battery; 20 hour battery life (typical) with low battery indication
Dimensions/weight	3.2 x 10.1 x 1.5" (80 x 256 x 38mm) / 8.5 oz. (240g)

Reference Information

Frequency Weighting Characteristics

Frequency (Hz)	A Weighting	C Weighting	Tolerance (IEC 651 Type 2)
31.5	-39.4dB	-3dB	±3dB
63	-26.2dB	-0.8dB	±2dB
125	-16.1dB	-0.2dB	±1.5dB
250	-8.6dB	0dB	±1.5dB
500	-3.2dB	0dB	±1.5dB
1 k	0dB	0dB	±1.5dB
2 k	+1.2dB	-0.2dB	±2dB
4 k	+1dB	-0.8dB	±3dB
8 k	-1.1dB	-3dB	±5dB

Typical A-Weighted Sound Levels

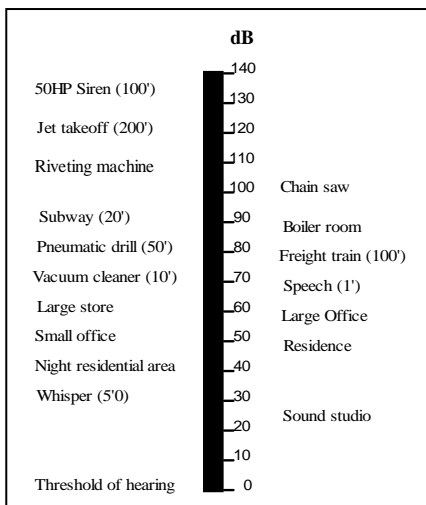

Warranty

FLIR Systems, Inc. warrants this Extech Instruments brand device to be free of defects in parts and workmanship for one year from date of shipment (a six month limited warranty applies to sensors and cables). If it should become necessary to return the instrument for service during or beyond the warranty period, contact the Customer Service Department for authorization. Visit the website www.extech.com for contact information. A Return Authorization (RA) number must be issued before any product is returned. The sender is responsible for shipping charges, freight, insurance and proper packaging to prevent damage in transit. This warranty does not apply to defects resulting from action of the user such as misuse, improper wiring, operation outside of specification, improper maintenance or repair, or unauthorized modification. FLIR Systems, Inc. specifically disclaims any implied warranties or merchantability or fitness for a specific purpose and will not be liable for any direct, indirect, incidental or consequential damages. FLIR's total liability is limited to repair or replacement of the product. The warranty set forth above is inclusive and no other warranty, whether written or oral, is expressed or implied.

Calibration, Repair, and Customer Care Services

FLIR Systems, Inc. offers repair and calibration services for the Extech Instruments products we sell. We offer NIST traceable calibration for most of our products. Contact our Customer Service Department for information on calibration service availability. Annual calibrations should be performed to verify meter performance and accuracy. Technical support and general customer service is also provided, refer to the contact information provided below.

Support Lines: U.S. (877) 239-8324; International: +1 (603) 324-7800

Technical Support: Option 3; E-mail: support@extech.com

Repair & Returns: Option 4; E-mail: repair@extech.com

Product specifications are subject to change without notice

Please visit our website for the most up-to-date information

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

ISO 9001 Certified

Copyright © 2013-2016 FLIR Systems, Inc.

All rights reserved including the right of reproduction in whole or in part in any form

www.extech.com

Garantie

FLIR Systems, Inc. garantit que cet appareil Extech Instruments est exempt de défauts matériaux et de fabrication pendant un an à partir de la date d'envoi (une garantie limitée de six mois s'applique aux capteurs et aux câbles). Si le renvoi de l'appareil pour réparation devient nécessaire durant ou après la période de garantie, contactez le service client pour autorisation. Pour obtenir les coordonnées, visitez le site Web suivant : www.extech.com. Un numéro d'autorisation de retour (AR) doit être délivré avant tout retour de produit. L'expéditeur prend à sa charge les frais d'expédition, le fret, l'assurance et l'emballage correct de l'appareil afin de prévenir toute détérioration durant le transport. Cette garantie ne s'applique pas aux dommages imputables à l'utilisateur, tels que l'usage impropre ou abusif, un mauvais câblage, une utilisation non conforme aux spécifications, un entretien ou une réparation incorrecte, ou toute modification non autorisée. FLIR Systems, Inc. déclinera spécifiquement toute garantie ou qualité marchande ou aptitude à l'emploi prévu, et ne sera en aucun cas tenu responsable pour tout dommage consécutif, direct, indirect ou accidentel. La responsabilité totale de FLIR est limitée à la réparation ou au remplacement du produit. La garantie définie ci-dessus est inclusive et aucune autre garantie, écrite ou orale, n'est exprimée ou implicite.

Calibrage, réparation et services après-vente

FLIR Systems, Inc. offre des services de calibrage et de réparation pour les produits Extech Instruments que nous commercialisons. Nous offrons l'étalonnage traçable NIST pour la plupart de nos produits. Contactez notre service clientèle pour obtenir des informations sur la disponibilité des services d'étalonnage. Un calibrage doit être effectué chaque année pour vérifier les performances et la précision du mètre. Nous offrons également une assistance technique et un service à la clientèle. Veuillez vous reporter aux coordonnées fournies ci-dessous.

Lignes d'assistance: États-Unis (877) 239-8324; international: +1 (603) 324-7800

Service d'assistance technique : Option 3 ; E-mail : support@extech.com

Réparations et retours : Option 4 ; E-mail : repair@extech.com

Les spécifications produit sont sujettes à modifications sans préavis.

Pour les toutes dernières informations, veuillez visiter notre site Web.

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

Certifié ISO 9001

Copyright © 2013-2016 FLIR Systems, Inc.

Tous droits réservés, y compris la reproduction partielle ou totale sous quelque forme que ce soit.

www.extech.com

Garantía

FLIR Systems, Inc., garantiza este dispositivo marca Extech Instruments para estar libre de defectos en partes o mano de obra durante un año a partir de la fecha de embarque (se aplica una garantía limitada de seis meses para cables y sensores). Si fuera necesario regresar el instrumento para servicio durante o después del período de garantía, llame al Departamento de Servicio a Clientes para obtener autorización. Visite www.extech.com para Información de contacto. Se debe expedir un número de Autorización de Devolución (AD) antes de regresar cualquier producto. El remitente es responsable de los gastos de embarque, flete, seguro y empaque apropiado para prevenir daños en tránsito. Esta garantía no se aplica a defectos resultantes de las acciones del usuario como el mal uso, alambrado equivocado, operación fuera de las especificaciones, mantenimiento o reparación inadecuada o modificación no autorizada. FLIR Systems, Inc., rechaza específicamente cualesquier garantías implícitas o factibilidad de comercialización o idoneidad para cualquier propósito determinado y no será responsable por cualesquier daños directos, indirectos, incidentales o consecuentes. La responsabilidad total de FLIR está limitada a la reparación o reemplazo del producto. La garantía precedente es inclusiva y no hay otra garantía ya sea escrita u oral, expresa o implícita.

Servicios de calibración, reparación y atención a clientes

FLIR Systems, Inc., ofrece servicios de reparación y calibración para los productos que vendemos de Extech Instruments. Ofrecemos calibración rastreable a NIST para la mayoría de nuestros productos, para información sobre la disponibilidad del servicio de calibración por favor llame a nuestro Departamento de Servicio al Cliente.

Para verificar el funcionamiento y precisión se debe realizar la calibración anual. Además se provee Soporte Técnico y servicios generales al cliente, consulte la información de contacto en seguida.

Líneas de soporte: EE.UU. (877) 239-8324; Internacional: +1 (603) 324-7800

Soporte Técnico Opción 3; correo electrónico: support@extech.com

Reparación / Devoluciones: Opción 4; correo electrónico: repair@extech.com

Las especificaciones del producto están sujetas a cambios sin aviso

Por favor visite nuestra página en Internet para la información más actualizada

www.extech.com

FLIR Commercial Systems, Inc., 9 Townsend West, Nashua, NH 03063 USA

Certificado ISO 9001

Copyright © 2013-2016 FLIR Systems, Inc.

Reservados todos los derechos, incluyendo el derecho de reproducción total o parcial en cualquier medio

www.extech.com