

PE1 Series



Specifications:

Rated Voltage: 250VAC Maximum - 50/60 Hz

Rated Current: 115VAC 250VAC
10A 10A

Current Overload: 6X for 8 seconds

Hi-Pot Test (1 min):

Line to Ground 1500VAC
Line to Line 2250VDC

Insulation Resistance: $9 \times 10^9 \Omega$ at 100VDC

Ambient Temperature: 40°C Max at rated current

Humidity Range: 0% to 95% R.H.

Termination:

- QC – Quick Connect
- IEC Receptacle

Maximum Leakage Current:

Each Line to Ground	PE1	PE1-PO
115VAC, 60Hz:	0.25mA	0.4mA
250VAC, 50Hz:	0.40mA	.75mA

Voltage Select Card: Installed in 120VAC position unless otherwise specified


Agency Approvals:




Features:

- RFI Filter Module Combines IEC Connector, Fusing, Optional Voltage Select and On/Off Switch into a Single, Space-Efficient Assembly
- Enhanced Low Frequency Response with No Resonant Peaks
- Fully Shielded for Radiative Noise Control
- Accepts Either U.S. or European Standard Fuse Sizes. Dual or Single Power Line Fusing

PE1 Series Simplified Schematic without Voltage Selector

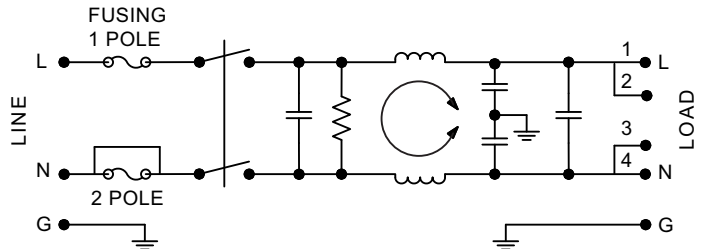

PE1 Series Simplified Schematic with Voltage Selector

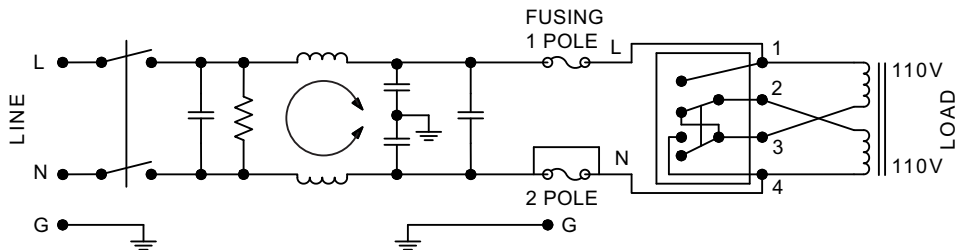



Nominal Current Rating	Part Number	Termination Line/Load	MINIMUM INSERTION LOSS - dB (50 ohm Circuit)							
			MODE	Frequency - MHz						
				.05	.15	.50	.10	5.0	10	30
10A	PE1XXX10	IEC/QC	Common	10	20	30	38	45	50	50
			Differential	10	20	30	35	55	60	55
	PE1XXXP0	IEC/QC	Common	13	24	33	38	48	54	54
			Differential	10	20	30	35	65	65	55

NOTE: Other combinations of terminals may be specified on special order.




PE1
(10Amp)
Dimensions

Refer to Standard
Mounting Cutouts on
Page 58

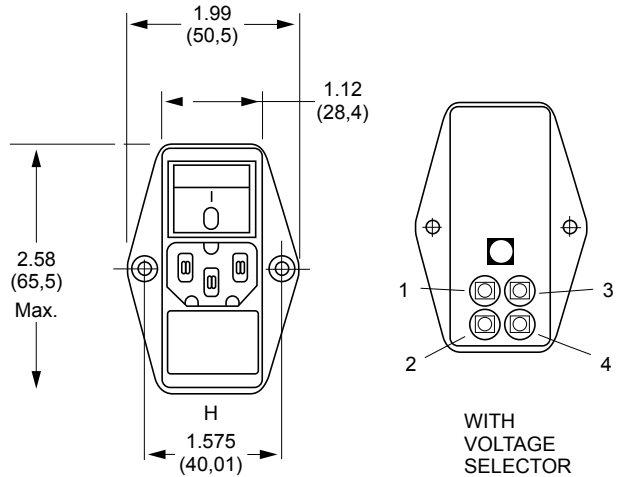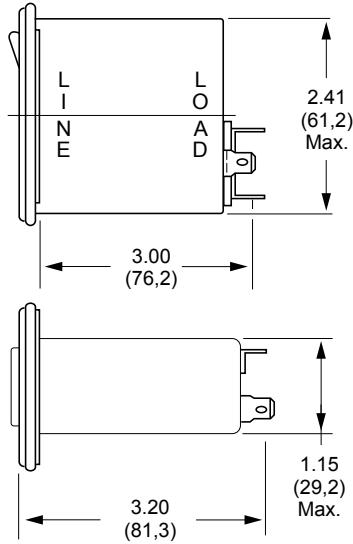

How to Order

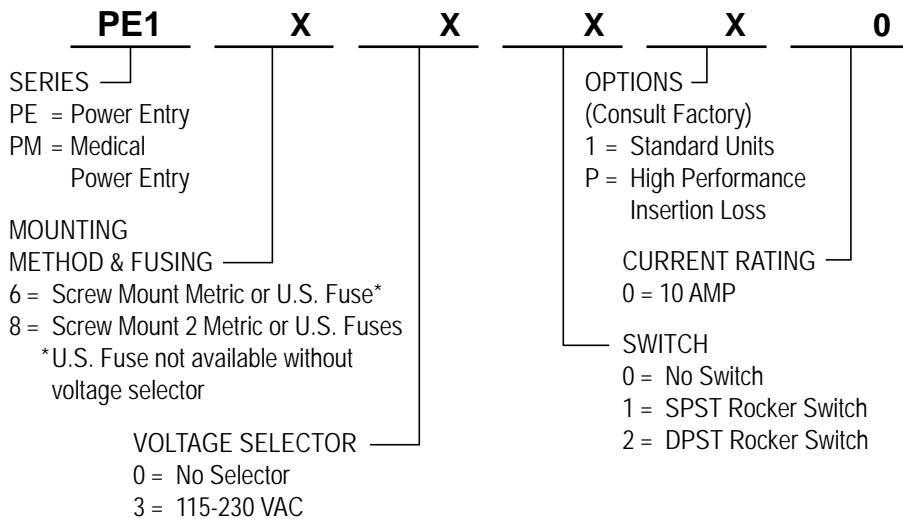

**INSTALLATION INSTRUCTION
IMPORTANT – CHANGING
FUSE/VOLTAGE**

PE1
To change fuse, remove power cord. Remove voltage selector and replace fuse. Reinsert fuse holder. To change the operating voltage on the PE1 Series, remove the power cord and rotate fuse holder block until desired voltage aligns with the mark on the module housing.

- **Filter shipped without fuse.**
- Always use caution when selecting and changing fuses and voltage requirements. Curtis Industries is not responsible for malfunction due to improper installation/selection of fuse and/or voltage select.**

